

TABLE OF CONTENTS

Table of Contents.....	1,2,3
PX-2 Series	
PX-2 Parts Diagram (Serial #'s 09963776 to 10977309).....	4
Parts List.....	5
PX-2 Parts Diagram (Serial #'s 10977310 to 079916154).....	6
Parts List.....	7
PX-2 Parts Diagram (Serial #'s 079916156 to Present).....	8
Parts List.....	9
PX-2-120 (28 Volt) Parts Diagram (Serial #'s 080446449 to Present).....	10
Parts List.....	11
PX-2-130 (28 Volt) Parts Diagram (Serial #'s 080446449 to Present).....	12
Parts List.....	13
PX-3 Series	
PX-3S-175 (28 Volt) Parts Diagram (Serial #'s 080446449 to 070553264).....	14
Parts List.....	15
PX-3S-175 (28 Volt) Parts Diagram (Serial #'s 070553265 to Present).....	16
Parts List.....	17
PX-3S-200 Parts Diagram (Serial #'s 0395029 to 100235241).....	18
Parts List.....	19
PX-3S-200 & 250 Parts Diagram (Serial #'s 100235242 to 070553264).....	20
Parts List.....	21
PX-3S-200 & 250 Parts Diagram (Serial #'s 070553265 to 090555595).....	22
Parts List.....	23
PX-3S-200 & 250 Parts Diagram (Serial #'s 090555596 to Present).....	24
Parts List.....	25
PX-3S-285 Parts Diagram (Serial #'s 0 to 070553264).....	26
Parts List.....	27
PX-3S-285 Parts Diagram (Serial #'s 070553265 to Present).....	28
Parts List.....	29
PX-3S-305 Parts Diagram (Serial #'s 0 to 070553264).....	30
Parts List.....	31
PX-3S-305 Parts Diagram (Serial #'s 070553265 to Present).....	32
Parts List.....	33
PX-4 Series	
PX-4-CS Parts Diagram (Discontinued-Some Parts Still Available).....	34
Parts List.....	35
PX-4G Parts Diagram (Serial #'s 10964126 to 049914735).....	36
Parts List.....	37
PX-4G-5 Parts Diagram (Serial #'s 049914736 to Present).....	38
Parts List.....	39
PX-4-JM & PM-120 (28 Volt) Parts Diagram (Serial #'s 020442779 to Present).....	40
Parts List.....	41
PX-4-JM & PM-210 (14 Volt) Parts Diagram (Serial #'s 0604451249 to Present).....	42
Parts List.....	43
PX-4-S Parts Diagram (Discontinued-Some Parts Still Available).....	44
Parts List.....	45

02-04-08

Continued on Next Page



! " ### \$ % \$ &

. 01#2 3 4 5 3 6. 26.

				!	%
#					
\$			%	!	&
#					
		% & ' !		!	
#					
(% %&' % !		!	
#					,
(% &		!	
#					
(!	%
#					
	%	%	& !	' % !	&
#					
%)) * + , % % & !		' % !	!	%
#					%
%			' % !	!	%
#					%
%			' % !	!	%
#					%
%			' % !	!	%&
#					%
%			' % !	!	%
#					%
%		& & ' !		!	%
#					
% %		' % !		!	,
#					
% %		' % !		!	
#					
%		' % !		!	%
#					
%		' % !		!	&
#					
% % ' !		' % !		!	&
#					&
% % ' !		' % !		!	&
#					&
% ' !		' % !		!	&
#					&
% ' !		' % !		!	&%
#					&

PX-8 Series	
PX-8 Parts Diagram	88
Parts List.....	89
Miscellaneous Parts Photographs	
Front Housings Page One.....	90
Front Housings Page Two.....	91
Rear Housings.....	92
Rotors.....	93
Stators Page One.....	94
Stators Page Two.....	95
Fans.....	96
Bearings.....	97
Heat Sinks.....	98
Pulleys Page One.....	99
Pulleys Page Two.....	100
Bracket Kits.....	101
Brush Holders.....	102
Information	
PennTex Alternator & Alternator Kit Part Number Identification List.....	103
PennTex Parts Sold In Multiples Or "Packages" Index.....	104

This silver and teal sticker comes with every PennTex Charging System.

**This vehicle is equipped with a
PENNTEX High Amperage Alternator
and/or High Idle Device. For
Technical Assistance, please call
TOLL FREE: 877-590-7366**

**Size: 2" x 4"
Part Number:
PX-1317**