

HEAT SINKS

NEGATIVE

Uses two rectangular PX-1072 Heat Sink Insulators between case and heat sink- NOT included with this assembly.



PX-2540

Heat Sink Asm, Right Positive (PX2/4G/5)
Also replaces any PX-2504.

NEGATIVE

No insulator is used between the case and heat sink on a PX2, PX4, or *non-dual positive post* PX5 alternator. Be sure of what you have.



PX-2541

Heat Sink Asm, Left Negative ((PX2/4G/5)
Also replaces any PX-2505

POSITIVE

See Catalog Parts Drawing for a diagram of the washer and insulator placement on this heat sink. Part includes two PX-1091 insulators.



PX-2544


Heat Sink Asm, Left Positive
Used on *Dual Positive Post* PX5 Alternators Only

"LEFT" AND "RIGHT" HEAT SINKS ARE LOOKING AT THEM FROM THE FRONT OF THE ALTERNATOR



PX-4289

Heat Sink Asm, Positive (PX4V-220)

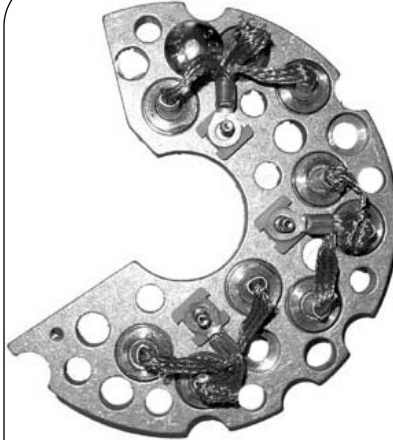

PA-1024

Heat Sink Asm, Positive (PX4-210)



Heat Sink Stud

PX-1040-PKG



PX-1039-PKG
Insulator

(PX-2/3/4/5/6)
Packages of 25



PX-3504

Heat Sink Asm, Positive (PX3&622)

"LEFT" AND "RIGHT" HEAT SINKS ARE LOOKING AT THEM FROM THE FRONT OF THE ALTERNATOR



PX-3505

Heat Sink Asm, Negative (PX3&622)



PX-6505

Heat Sink Asm, Positive Left

PX-6504

Heat Sink, Positive Right (PX6)



PX-6506

Heat Sink Asm, Negative (PX3&6)