

TABLE OF CONTENTS

Ph: 817-590-2818 Fax: 817-590-0505 sales@penntexusa.com

Table of Contents.....	1,2,3
PX-2 Series:	
PX-2 Parts Diagram (Serial #'s 09963776 to 10977309).....	4
Parts List.....	5
PX-2 Parts Diagram (Serial #'s 10977310 to 079916154).....	6
Parts List.....	7
PX-2 Parts Diagram (Serial #'s 079916156 to Present).....	8
Parts List.....	9
PX-2-120 (28 Volt) Parts Diagram (Serial #'s 080446449 to Present).....	10
Parts List.....	11
PX-2-130 (28 Volt) Parts Diagram (Serial #'s 080446449 to Present).....	12
Parts List.....	13
PX-3 Series:	
PX-3S-175 (28 Volt) Parts Diagram (All).....	14
Parts List.....	15
PX-3S-200 Parts Diagram (Serial #'s 0395029 to 100235241).....	16
Parts List.....	17
PX-3S-200 & 250 Parts Diagram (100235242 to Present).....	18
Parts List.....	19
PX-3S-285 Parts Diagram (All).....	20
Parts List.....	21
PX-3S-305 Parts Diagram (All).....	22
Parts List.....	23
PX-4 Series:	
PX-4-CS Parts Diagram (Discontinued-Some Parts Still Available).....	24
Parts List.....	25
PX-4G Parts Diagram (Serial #'s 10964126 to 049914735).....	26
Parts List.....	27
PX-4G-5 Parts Diagram (Serial #'s 049914736 to Present).....	28
Parts List.....	29
PX-4-JM & PM-120 (28 Volt) Parts Diagram (Serial #'s 020442779 to Present).....	30
Parts List.....	31
PX-4-JM & PM-210 (14 Volt) Parts Diagram (Serial #'s 0604451249 to Present).....	32
Parts List.....	33
PX-4-S Parts Diagram (Discontinued-Some Parts Still Available).....	34
Parts List.....	35

05-20-09

Continued on Next Page

Ph: 817-590-2818 Fax: 817-590-0505 sales@penntexusa.com

PX-4 Series (continued):

PX-4V,P,P2,DV-210 Parts Diagram (Serial #'s 020442779 to 050552055).....	36
Parts List.....	37
PX-4V,P,P2,SMD-210 Parts Diagram (Serial #'s 050552056 to Present).....	38
Parts List.....	39
PX-4V-220 Parts Diagram (Serial #'s 020658235 to Present).....	40
Parts List.....	41

PX-5 Series:

PX-5-200 & 250 Parts Diagram (Serial #'s 06976693 to 079916154).....	42
Parts List.....	43
PX-5-200 & 250 Parts Diagram (Serial #'s 079916155 to 100555948).....	44
Parts List.....	45
PX-5-200 & 250 Parts Diagram (Serial #'s 100555949 to Present).....	46
Parts List.....	47

PX-6 Series:

PX-6SH-140 Hybrid / 6S-160,190 (28 Volt) Parts Diagram (All).....	48
Parts List.....	49
PX-6S-200 Parts Diagram (All).....	50
Parts List.....	51
PX-6Q-200 Parts Diagram (All).....	52
Parts List.....	53
PX-6S-275 Parts Diagram (Serial #'s 0 to 100235241).....	54
Parts List.....	55
PX-6S,6T-275 Parts Diagram (Serial #'s 100235242 to Present).....	56
Parts List.....	57
PX-6Q-275 Parts Diagram (All).....	58
Parts List.....	59
PX-6S,6T-350 Parts Diagram (All).....	60
Parts List.....	61
PX-6Q-350 Parts Diagram (All).....	62
Parts List.....	63

PX-8 Series:

PX-8 Parts Diagram	64
Parts List.....	65

05-20-09

Continued on Next Page

Ph: 817-590-2818 Fax: 817-590-0505 sales@penntexusa.com

Miscellaneous Parts Photographs:

Front Housings, Page One.....	66
Front Housings, Page Two.....	67
Rear Housings.....	68
Rotors.....	69
Stators, Page One.....	70
Stators, Page Two.....	71
Fans.....	72
Bearings.....	73
Heat Sinks.....	74
Pulleys, Page One.....	75
Pulleys, Page Two.....	76
Bracket Kits.....	77
Brush Holders.....	78
Information:	
PennTex Alternator & Alternator Kit Part Number Identification List.....	79
PennTex Parts Sold In Multiples Or "Packages" Index.....	80

This silver and teal sticker comes with every PennTex Charging System.

**This vehicle is equipped with a
PENNTEX High Amperage Alternator
and/or High Idle Device. For
Technical Assistance, please call
TOLL FREE: 877-590-7366**

Size: 2" x 4"
Part Number:
PX-1317